

>



Model Number: 413031

Karcher Water Pump Vacuum Switch Controls Burner for Pressure Washer 413031

Manufacturer: Karcher Pressure Washing

Karcher Water Pump Vacuum Switch Controls Burner for Pressure Washer 413031

Switch is normally off and turns on burner when you squeeze trigger to create a vacuum between water box and pump head.
Switch will not actuate if water box or fresh water tank runs dry.

OEM associations:

413031

8.712-391.0

87123910

Availability: This product was added to our catalog on Sunday 17 November, 2013